



X64 Wireless Terminals

Unpacking and Connecting the Cables

Package content

The X64 wireless terminals package contains the following items:

1. Antenna wich comes packed in a separate box with its cables
2. A rounded box (tube shape) wich contains the terminal, AC adapter, base (power chager), a CD containing all the necessary drives, and all the necessary cables (the USB-to_Serial cable may also bring a separate CD with its drives).



Connecting the cables

Connecting the cables to start installing, configuring and using the X64 wireless terminals is very straight forward. Start by connecting the the USB-to-Serial cable to the antenna's serial cable as shown on figure 1.



Fig. 1 USB-to-Serial connected to the Antenna

Then, plug the USB end of the USB-to-Serial cable to the USB port on the computer server as shown on figure 2.



Fig.2 USB-to-Serial cable connected to USB port on the computer server.

Then plug the base with the AC adapter, as shown in figure 3 (use the serial to plug an off-line terminal as shown below in figure 4).



Fig.3 AC adapter plugged to the base (charger)



Fig.4 Serial connected (for off-line terminals)

Finally, connected both the Antenna and the AC adapter to the power socket as shown in figure 5.

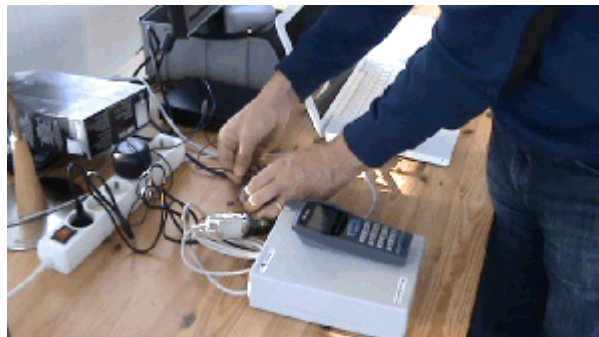


Fig.5 Connecting base and antenna to the power plug.

You have now all the cables plugged in order to start installing and configuring your X64 terminal. If you encountered any problems while plugging the cables, please refer to our instructional video located under support/manuals on our website at www.x64.com.